

SNOWRATOR SPREADER REPLACEMENT INSTALLATION GUIDE

TOOLS REQUIRED:


1/2" WRENCH/SOCKET

7/16" WRENCH/SOCKET

1/8" ALLEN WRENCH

VERIFY HOPPER IS EMPTY AND CLEAN BEFORE REPLACING SPREADER ASSEMBLY.

REMOVE MOTOR GUARD BY REMOVING (4) FASTENERS SHOWN. (2 EA. SIDE)

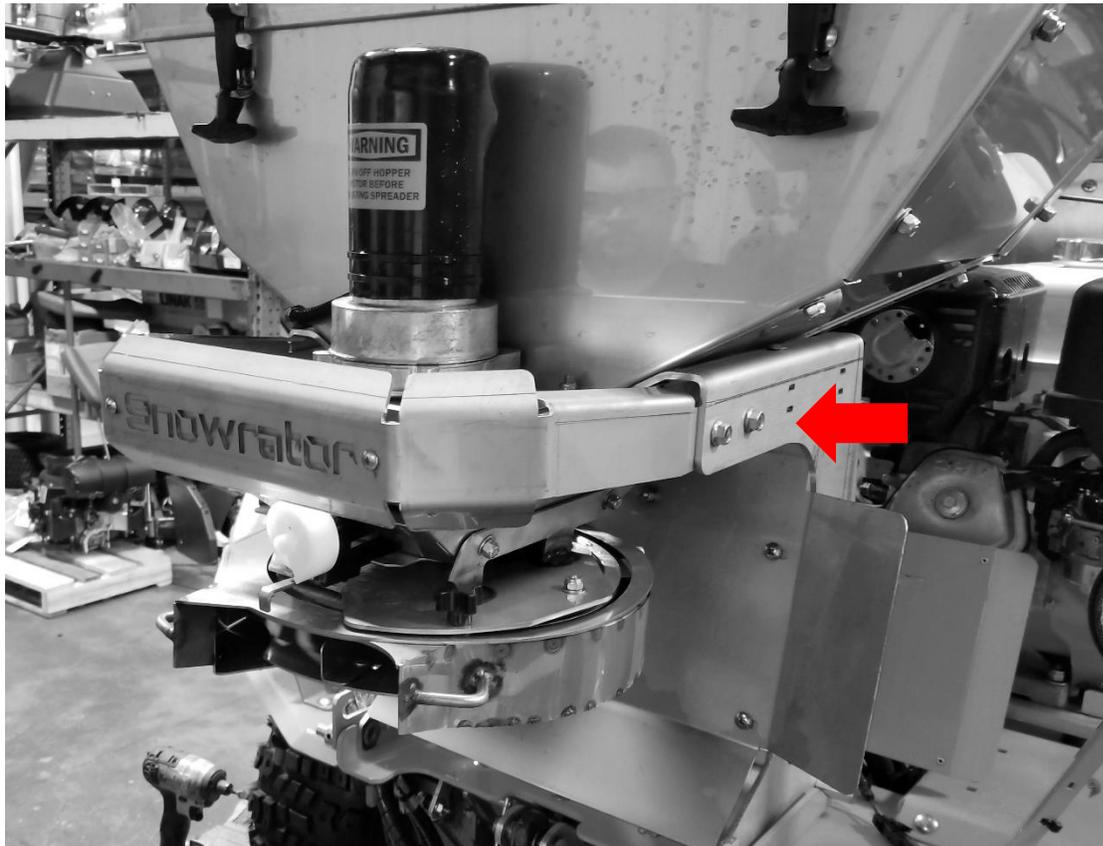

ROTATE SHAFT TO GAIN ACCESS TO BOTTOM SET SCREW IN COLLAR.
LOOSEN ONLY, DO NOT REMOVE COMPLETELY.

REMOVE THE (4) FASTENERS SECURING THE SPREADER ASSEMBLY TO HOPPER. REMOVE SPREADER TO
COMPLETE DISASSEMBLY.



INSTALL REPLACEMENT SPREADER
IN REVERSE ORDER.

ENSURE THAT SPREADER
SHAFT IS PROPERLY ALIGNED
WITH SET SCREW.

