
	Wright Manufacturing, Inc.	
Work Inst. Name: 36 Inch Aero Core Mulch Kit Install		
Inst. Number: SVC-SWI-0001	Revision: 01	Issue Date: N/A
Author: Chris Sturtz		Date: 2/26/15
Reviewer: Chris Sturtz		Date: 2/26/15
Approver: Chris Sturtz		Date: 2/26/15

Related Document: SVC-PB-0026

36" AERO CORE MULCH KIT INSTALL (95480005)

- 1) Remove stock side discharge baffle from cutter deck.
- 2) Install mulch kit using provided hardware, using the three holes used by the side discharge baffle (thin arrows) and two other mounting holes (bold arrows).
- 3) Once the mulch kit is installed bolt block off plate to deck discharge opening.

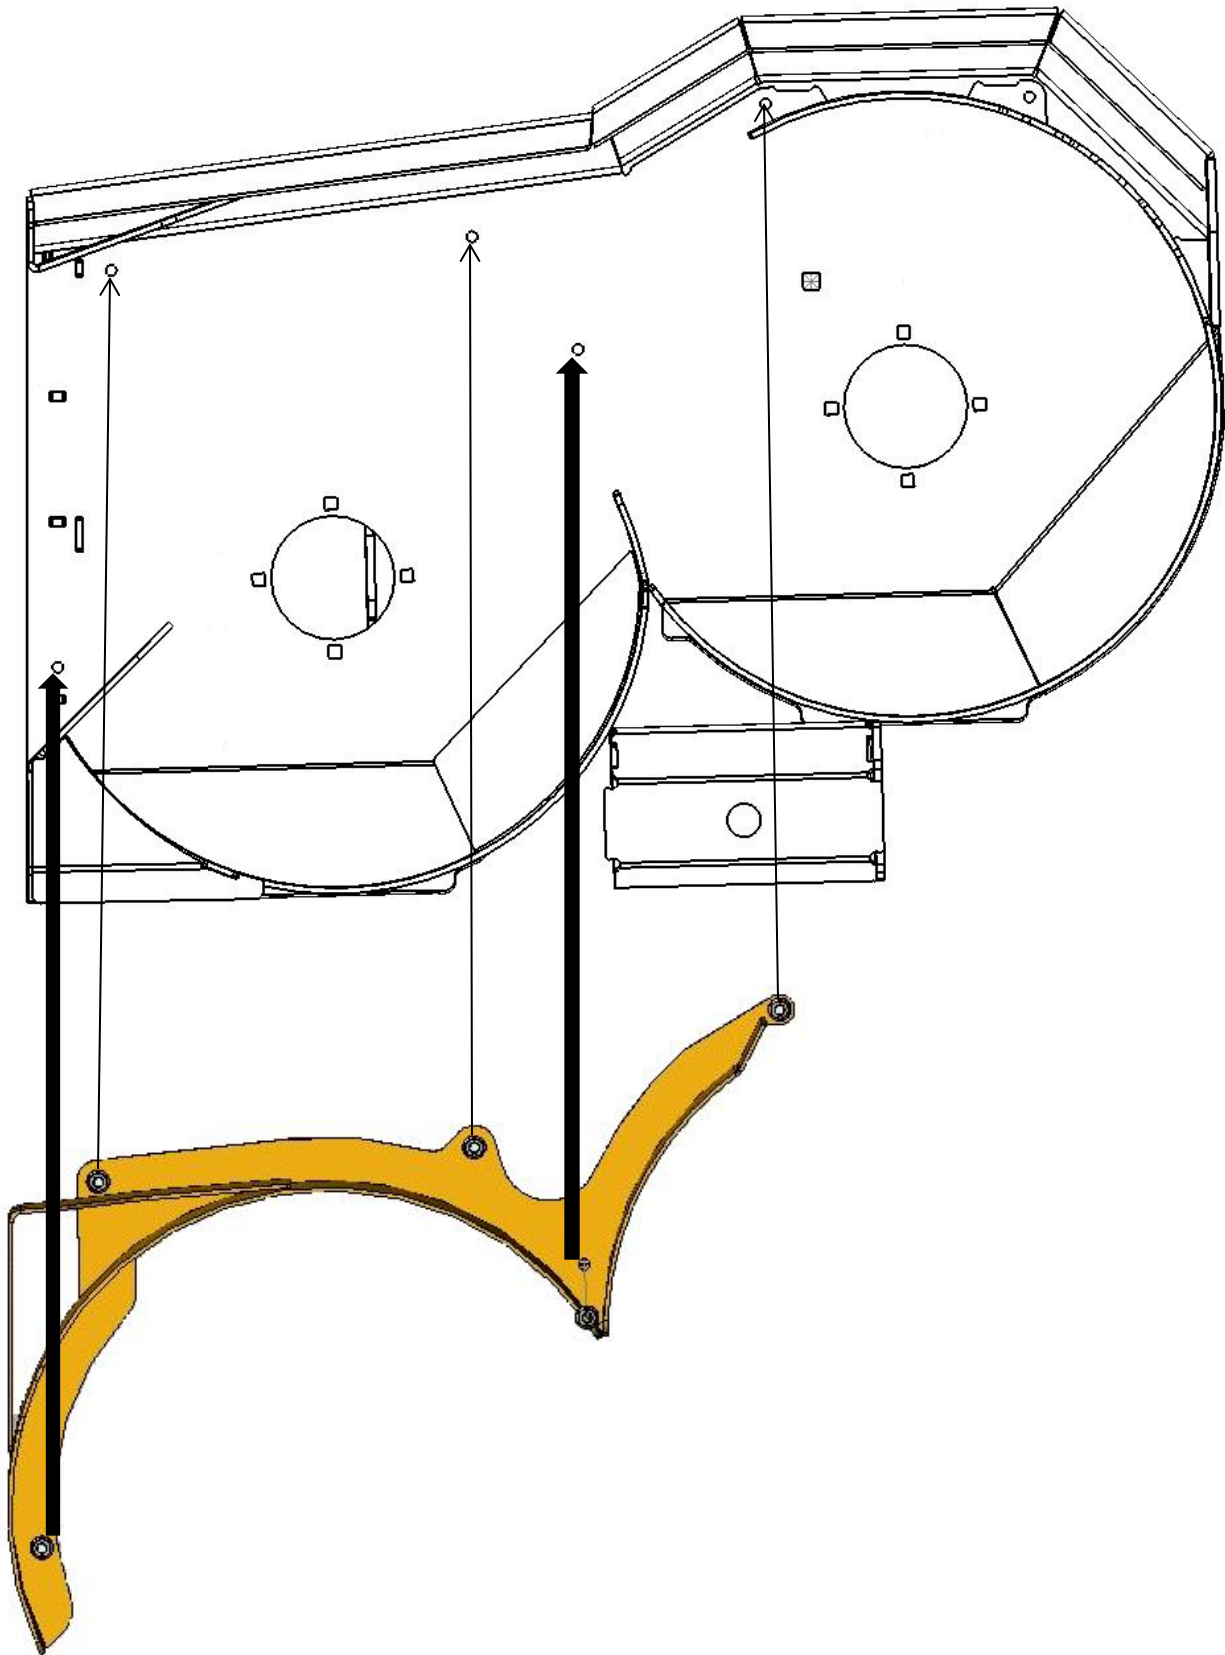

Revision Table

Name	Date	Reason for Changes	Version
Ed Wright	N/A	Initial Release	00
Chris Sturtz	2/26/15	Format Update	01