

Instructions: Diagnostic Tool Kit

This instruction sheet will show you the steps required to install the Briggs & Stratton Diagnostic Tool Kit software.


System Requirements

Operating System	Windows 10 Windows 11
CPU	2.0 Ghz or faster 64-bit
RAM	4 GB (8 GB or higher recommended)
Hard Drive Space	5 GB minimum solid-state drive (SSD) recommended
Screen Resolution	1366 x 768 minimum
Interface	Internet Connection


- Internet connection for tool activation and updates
- Briggs & Stratton Power Portal login

Installation


1. Using your login credentials, log into The Power Portal at: www.thepowerportal.com.
2. Select the "Briggs & Stratton" icon from the left-side menu (A, Figure 1).

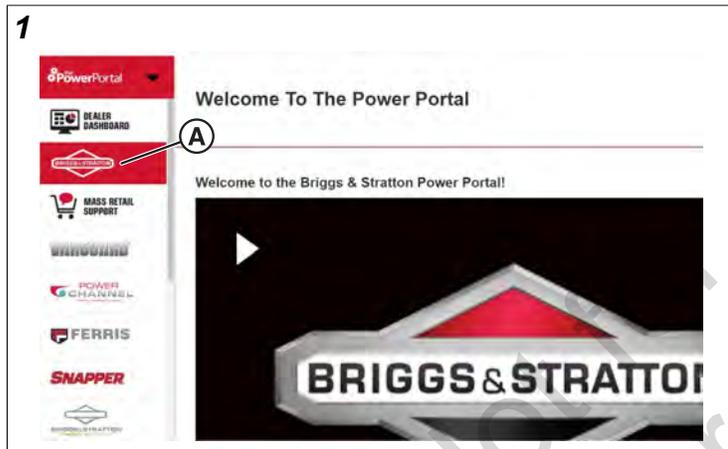

3. Expand the "Service" menu tab (A, Figure 2).

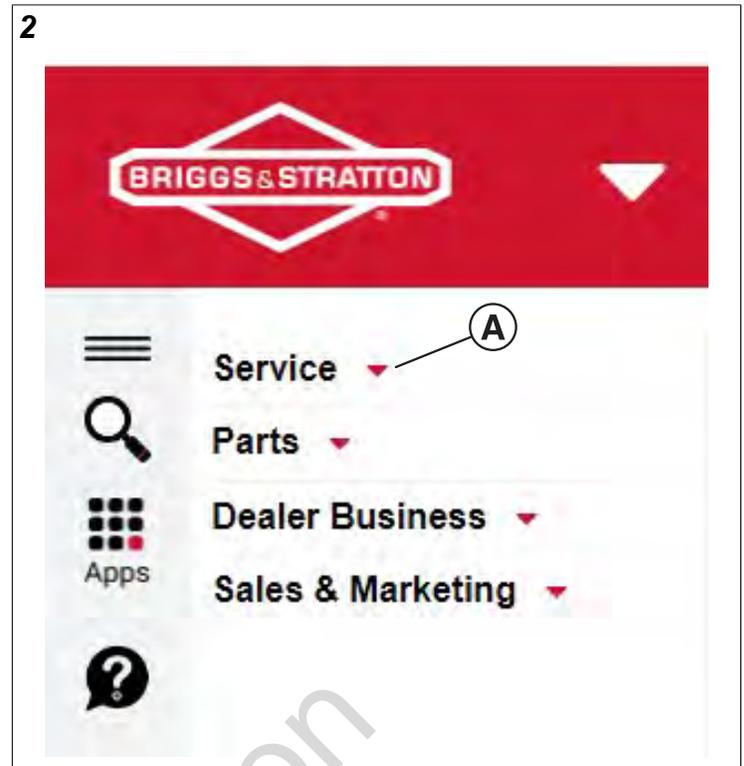

4. Proceed to the "EFI Resources" tab and select "Diagnostic Tool Software Download" (A, Figure 3).

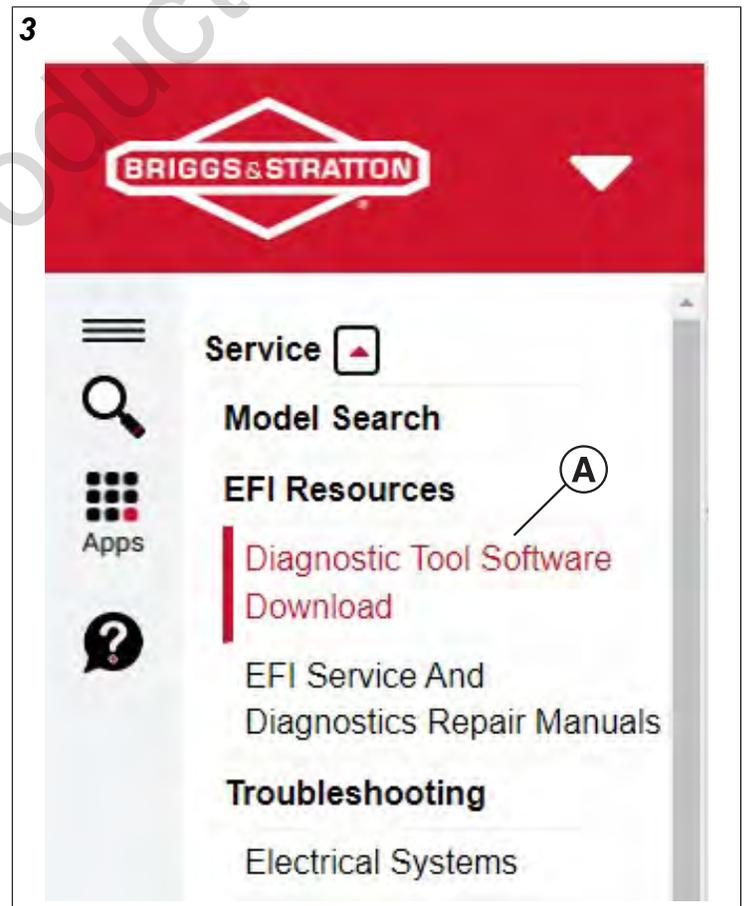

5. Select "Diagnostic Tool Software Download" (A, Figure 4).




NOTE: Your computer will automatically download the software installation file. If your computer fails to automatically download the software, select "Download" from the three listed links at the bottom of the description.

6. In your computer's download folder, select the "Diagnostic Tool Setup" installer (Figure 5).




NOTE: The Diagnostic Tool Setup installer will display the latest version of the software available.


7. Click Next (Figure 6).

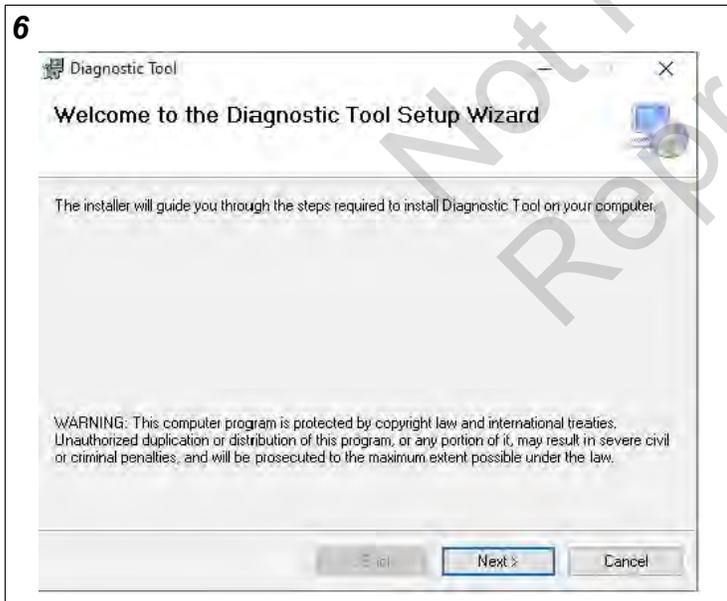

8. Make a folder selection to install the Diagnostic Tool. Use the Default folder as shown, and then click Next (Figure 7).

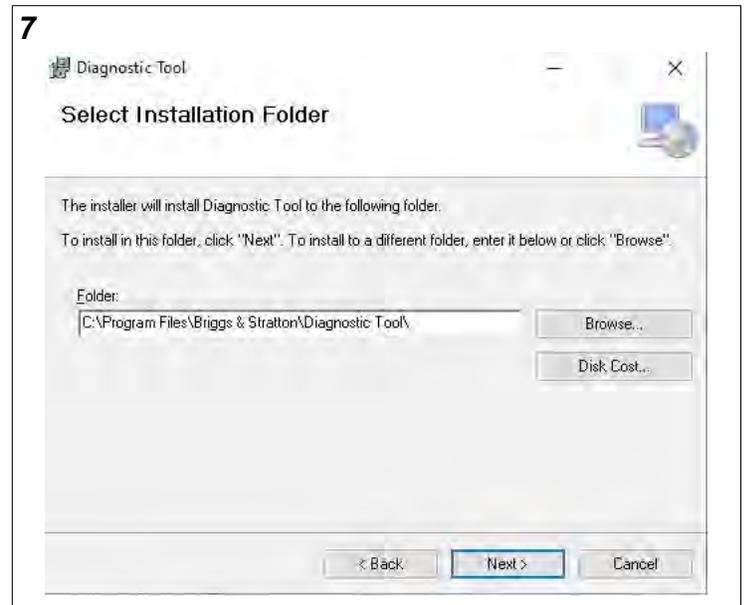

9. Click Next to start the Installation (Figure 8).

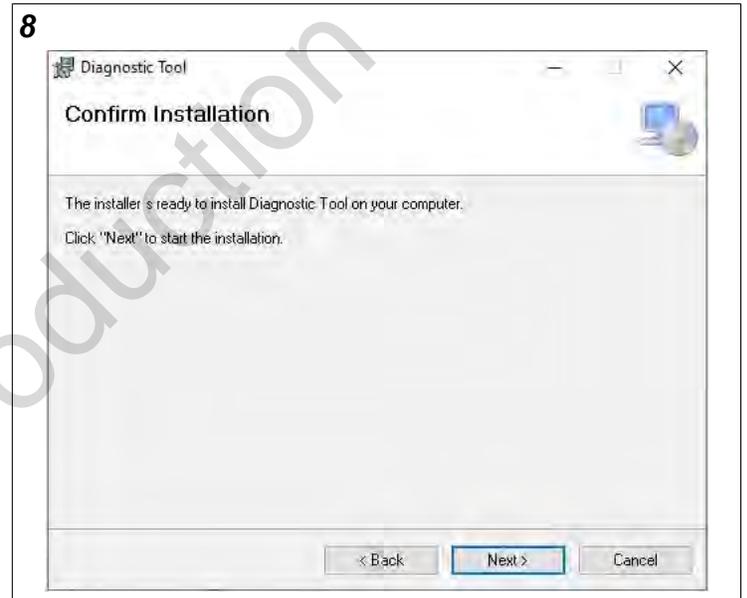


10. During installation you might receive a Windows Security notice (Figure 9). Click, *Install this driver software anyway*, to complete the installation.



11. During installation you might receive a prompt to install a device driver (Figure 10). Click Next to install the device driver and then click Finish (Figure 11) when installation of the driver is complete.




12. Click Close to exit the installation (Figure 12).

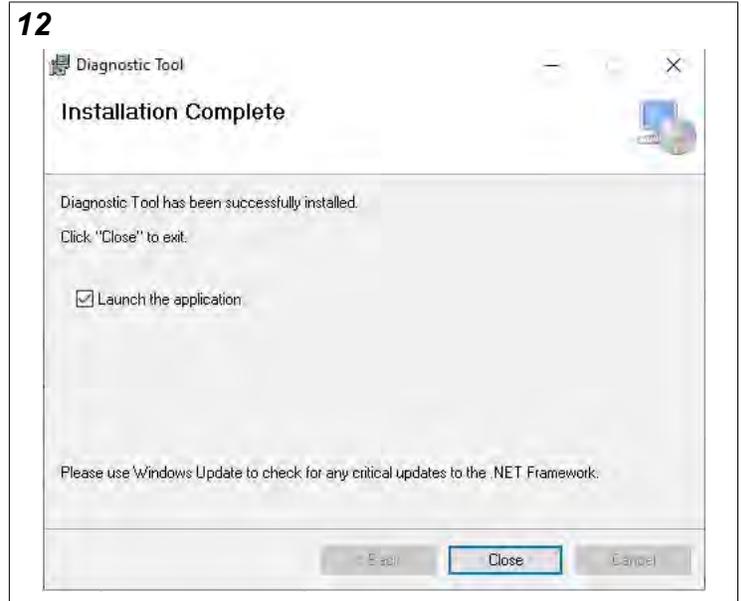

Use the Diagnostic Tool Software

1. Click the Windows Start button. Then, click the Diagnostic Tool (Figure 13) in the Briggs & Stratton folder.

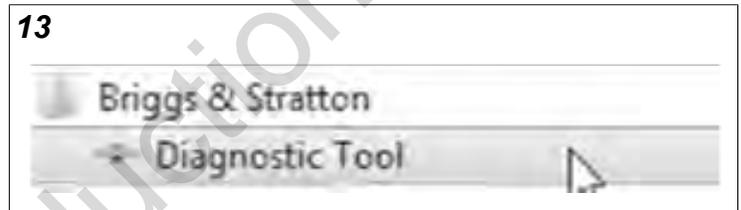

2. When the software opens, enter your Briggs & Stratton Power Portal dealer User Name and Password to activate the software (Figure 14).

