

Instruction Sheet

Kit Number: 79207100

SUSPENSION SEAT KIT

Kit Number: 79207100



WARNING: FAILURE TO FOLLOW

INSTRUCTIONS could result in personal injury and/or damage to unit.

Read, understand, and follow all safety practices in Owner/Operator Manual before beginning.

TOOLS REQUIRED

- 5/16", 13mm wrenches

Package Contents

Check contents of your kit for the parts listed (Figure 1):

Item	Part No.	Qty.	Description
1	00674100	1	Suspension seat
2	03490500	1	Seat switch
3	06541700	4	Lock nut
4	07411900	2	Tap screw
5	06514900	4	Push nut
6	05508900	4	Bushing
7	06435700	4	Flat washer

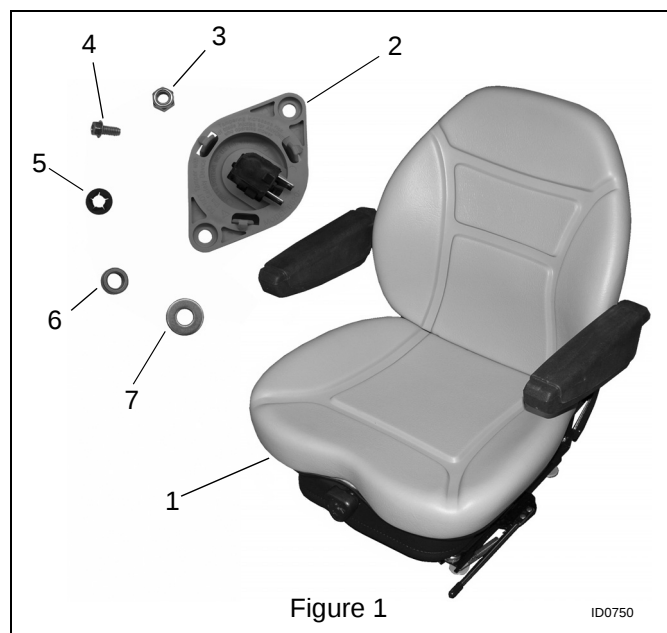


Figure 1

ID0750

INSTALLATION



WARNING: Disconnect battery prior to working on unit.

1. Disconnect negative battery cable from battery.
2. Tilt seat forward and disconnect seat sensor harness from seat sensor. Remove mounting hardware retaining seat and remove seat from swivel plate. See Figure 2.

Remove mounting hardware.

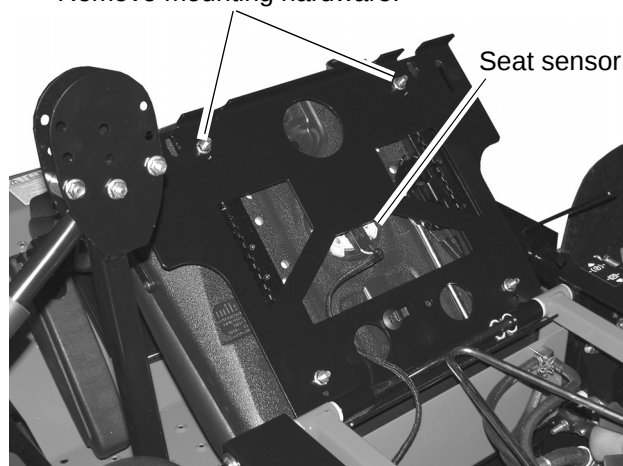


Figure 2

ID0751

3. Locate the seat sensor hole under the bottom cushion and install seat switch (item 2) using the tap screws (item 4). Ensure that the connector prongs face the rear of the seat. See Figure 3.



Figure 3

ID0752

4. Remove protectors from the suspension seat studs. Install bushings (item 6) and push nuts (item 5) on seat studs. See Figure 4.

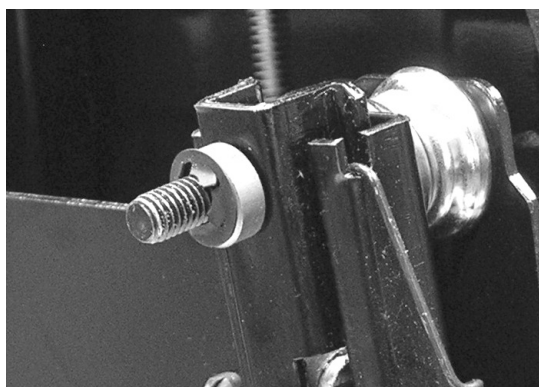


Figure 4

ID0753

5. On the unit, connect the seat sensor harness to the seat sensor. Install seat to seat swivel plate using flat washers (item 7) and lock nuts (item 3). See Figure 5.

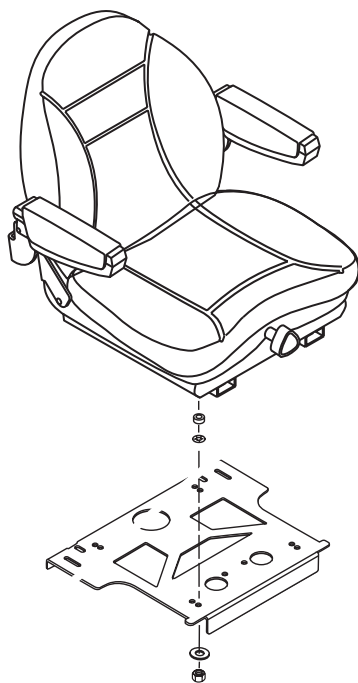


Figure 5

ID0754

6. Reconnect negative cable to battery.